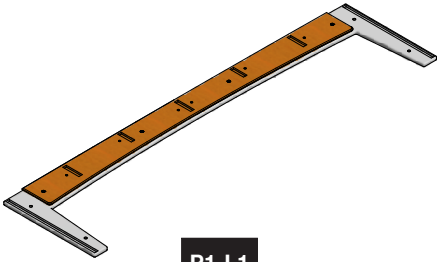
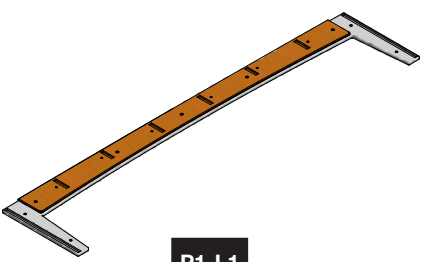
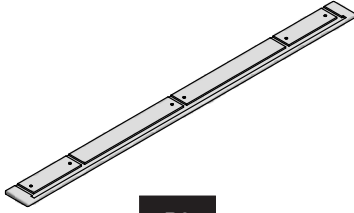
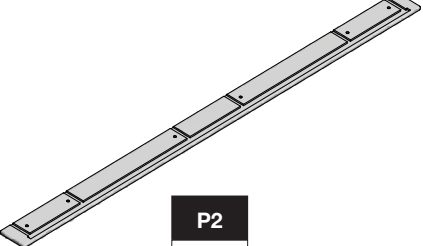
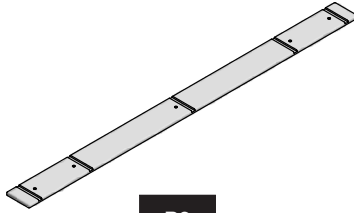
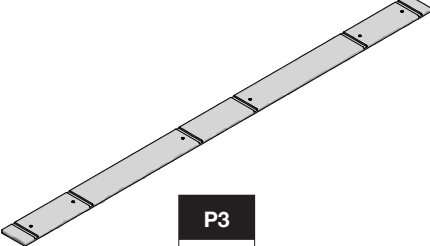




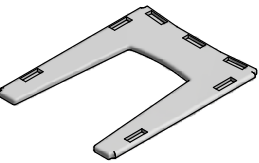
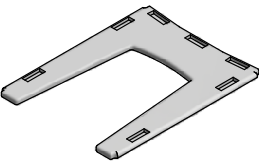







INCLUDED PARTS	
BENCH 68	BENCH 81
 <div>P1-L1 2x</div>	 <div>P1-L1 2x</div>
 <div>P2 2x</div>	 <div>P2 2x</div>
 <div>P3 1x</div>	 <div>P3 1x</div>
 <div>P4 3x</div>	 <div>P4 4x</div>
 <div>P5 2x</div>	 <div>P5 2x</div>
 <div>P6 2x</div>	 <div>P6 2x</div>
 <div>GB 33x</div>	 <div>GB 38x</div>
 <div>1" FLAT HEAD 23x</div>	 <div>1" FLAT HEAD 26x</div>
 <div>1.375" FLAT HEAD 10x</div>	 <div>1.375" FLAT HEAD 12x</div>
*Bolts shown <u>actual size</u> .	

ASSEMBLY TIPS: 5 Important Points You **NEED** to Read

1. Prior to beginning assembly, please inspect and inventory the parts to make sure you have everything and that nothing was damaged during shipping. If damage has occurred, please take photos and go to lolldesigns.com/damage. Rest assured we'll get it taken care of straight away!
2. To avoid scratching furniture, assemble on a clean, soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in.
3. **Start all bolts by hand to ensure proper alignment and to prevent cross threading.** Then using the provided tool, tighten until you feel resistance. Do not overtighten.
4. Bolts should not be forced, but some components, particularly blocks, fit snug but can still be installed without tools or excess force.
5. If parts are still not going together, please send us a photo of the part you are having trouble with.

BLOCK & BOLT INSTALLATION

Insert bolts through countersunk hole side of blocks as shown below.

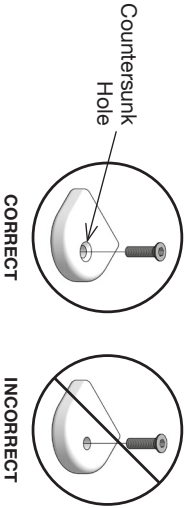

"Lol! Designs inspires people to appreciate the outdoors."

Greg Benson - Founder

♻️ RECYCLE THE PACKAGING

We've gone through great lengths to make as much of our packaging as possible recyclable. The cardboard box, paper wrap, filler and paper bags can all go in your recycling bin. The muslin hardware bags replaced plastic bags with the intention of reducing plastic and encouraging reuse. Lol! Designs and Planet Earth thank you!

WE WANT YOU TO LOVE YOUR LOLL

For more info and visual aids, watch the assembly videos at www.lolldesigns.com/videos
For product care & maintenance, visit www.lolldesigns.com/care-maintenance
For further lollygagging assistance, please reach out!

+1 877-740-3387
sales@lolldesigns.com

5912 Waseca Street
Duluth, Minnesota 55807

MADE IN THE USA



100% ORIGINAL Member



it's good to be recycled

ASSEMBLY INSTRUCTIONS & PRODUCT INFO:

ALFRESCO BENCH 68 / 81



1"
4x

Bench 81 has additional P4

P4

BENCH 81

GB
5x

GB
6x

1.375
5x

1.375
6x

**** Bench 68 Shown ****

P1-L1

1" Bolts

BENCH 68

BENCH 81

GB
9x

GE
10

1.375
5x

1"
4x

1.37
6x

1"
4x

1.375" Bolts

**** Bench 68 Shown ****

BENCH 68



GB

5x



1"

5x

BENCH 81



GB

6x



1"

6x

P2

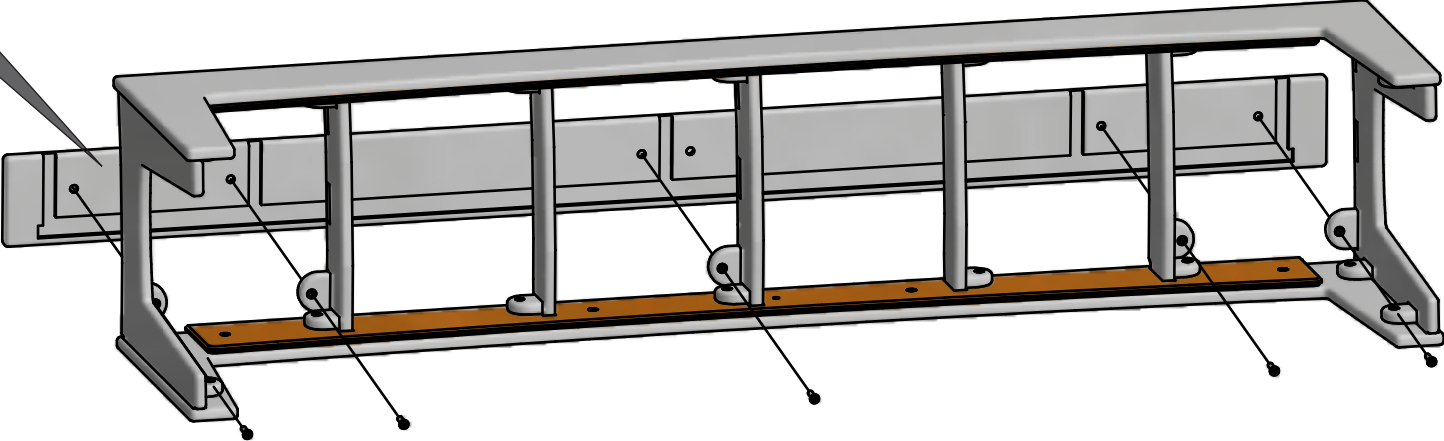


Diagram showing the assembly of Bench 68. A callout P2 points to the connection point between the top rail and the side rail. The diagram illustrates the placement of the top rail and the side rail, with the bottom rail already in place. The side rail is being attached to the top rail using the specified fasteners.


**** Bench 68 Shown ****

BENCH 68



GB

5x



1"


5x

BENCH 81



GB

6x



1"

6x

P3

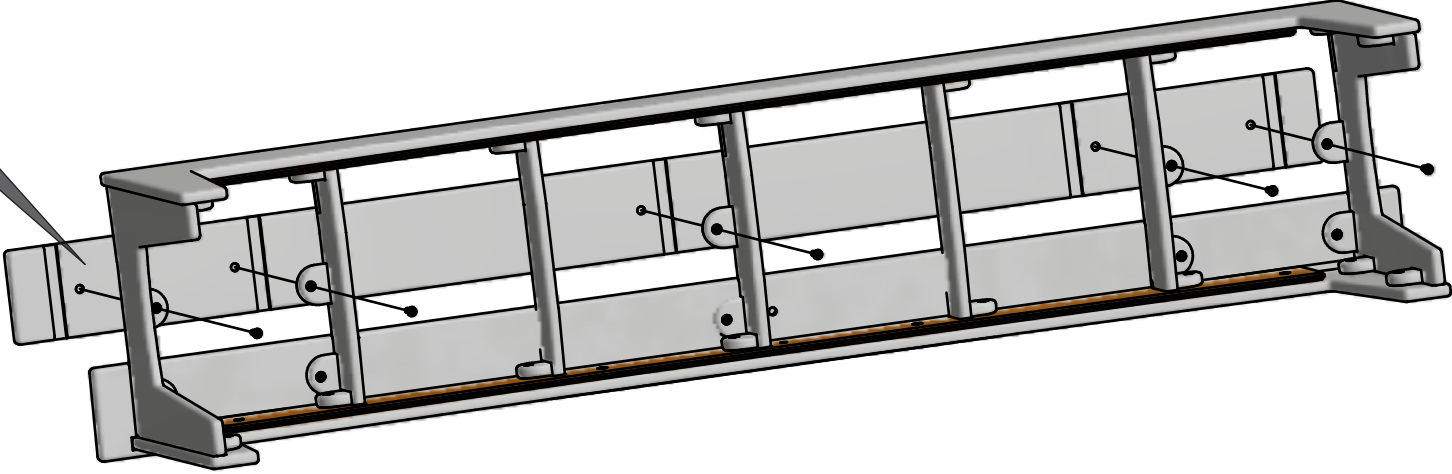


Diagram showing the assembly of Bench 68. A callout P3 points to the connection point between the top rail and the side rail. The diagram illustrates the placement of the top rail and the side rail, with the bottom rail already in place. The side rail is being attached to the top rail using the specified fasteners.

**** Bench 68 Shown ****

BENCH 68



GB

5x



1"


5x

BENCH 81



GB

6x



1"

6x

P2

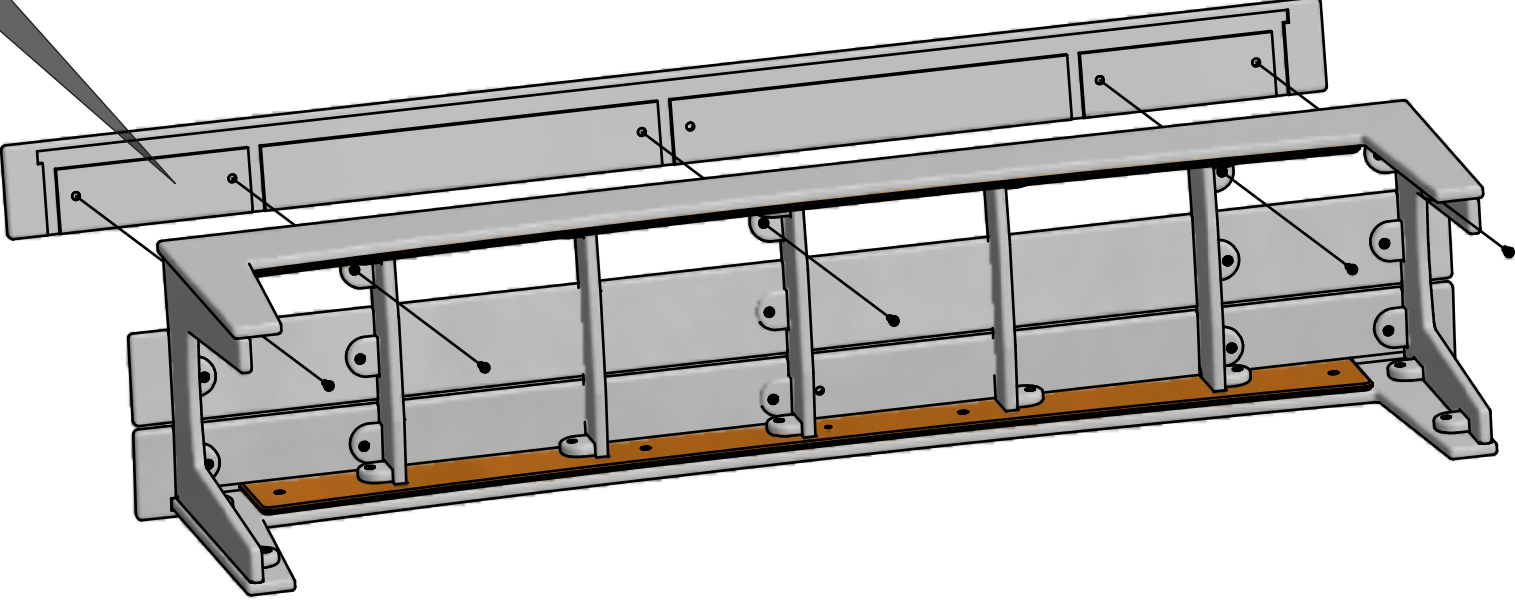


Diagram showing the assembly of Bench 68. A callout P2 points to the connection point between the top rail and the side rail. The diagram illustrates the placement of the top rail and the side rail, with the bottom rail already in place. The side rail is being attached to the top rail using the specified fasteners.

**** Bench 68 Shown ****